

Anleitung Papiereinzug/Pickup-Roller wechseln für

- [HP LaserJet 1010](#)
- [HP LaserJet 1012](#)
- [HP LaserJet 1015](#)
- [HP LaserJet 1020](#)
- [HP LaserJet 1022](#)
- [HP LaserJet 1022n](#)
- [HP LaserJet 1022nw](#)
- [HP LaserJet 3015](#)
- [HP LaserJet 3020](#)
- [HP LaserJet 3030](#)
- [HP LaserJet 3050](#)
- [HP LaserJet 3052](#)
- [HP LaserJet 3055](#)
- [HP LaserJet M1005MFP](#)
- [HP LaserJet M1319f](#)

User-replaceable parts


To order a new pickup roller or separation pad, go to www.partsdirect.hp.com.

Replacing the pickup roller


If the printer regularly misfeeds (no media feeds through) and cleaning the pickup roller does not fix the problem, replace the pickup roller.

 **CAUTION** Failure to complete all of the steps in this procedure might damage the product.


- 1 Turn off the printer, unplug and remove the power cord. Wait for the printer to cool.

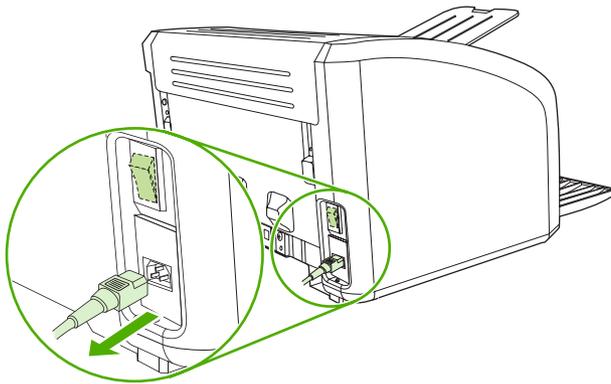

- 2 Open the print-cartridge door, and remove the print cartridge (HP LJ 1010 series printer shown).

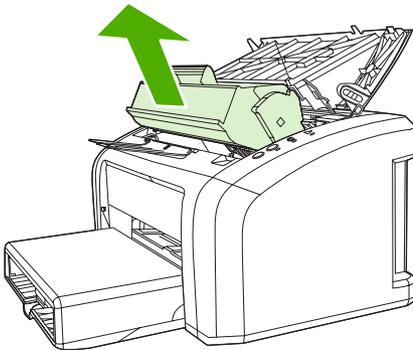


- 3 Locate the pickup roller (HP LJ 1010 series printer shown).

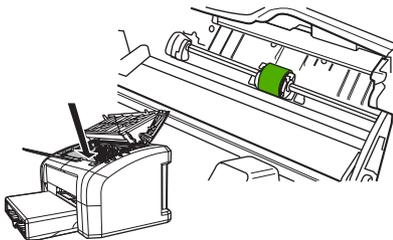


- 4 Gently release the small, white tabs on each side of the pickup roller by pushing them away from the roller, and then rotate the pickup roller toward the front.

 **CAUTION** Use gentle pressure to release the small, white tabs to avoid breaking them.

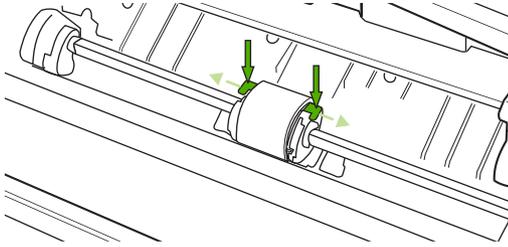


- 5 Gently pull the pickup roller up and out.

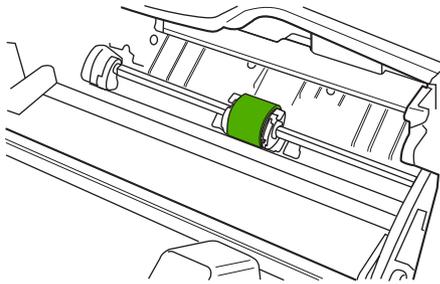


- 6 Position the new pickup roller in the slot of the previous pickup roller.


 **NOTE** Circular and rectangular pegs on each side prevent you from incorrectly positioning the pickup roller.

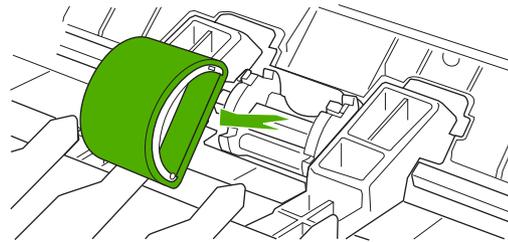


- 7 Rotate the top of the new pickup roller into position until the white tabs on each side of the roller snap the roller into place.

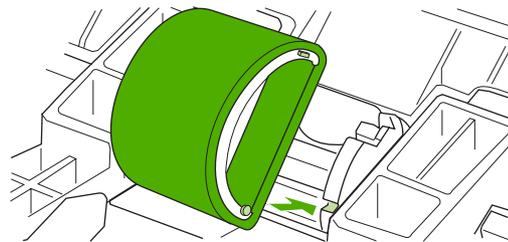

- 8 Reinstall the print cartridge, and close the print-cartridge door.

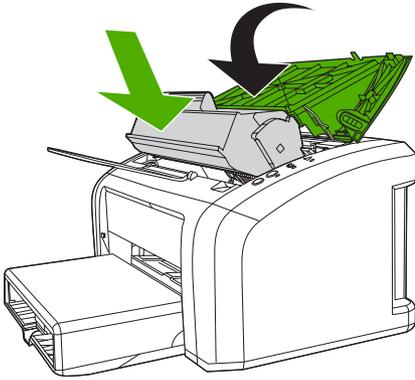

- 9 Plug in the printer, and then turn it on.

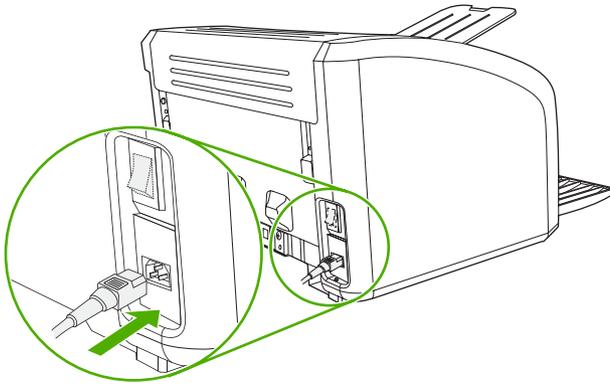

Replacing the separation pad


If the printer regularly pulls multiple sheets of media at a time, you might need to change the separation pad. Recurring feed problems might indicate that the separation pad is worn.

Normal use with good-quality media causes wear. The use of poor media might require more frequent replacement of the separation pad.




NOTE Before you change the separation pad, clean the pickup roller. See [Cleaning the pickup roller on page 34](#). To order parts, go to www.partsdirect.hp.com.


- 1 Turn off the printer, unplug and remove the power cord. Wait for the printer to cool.

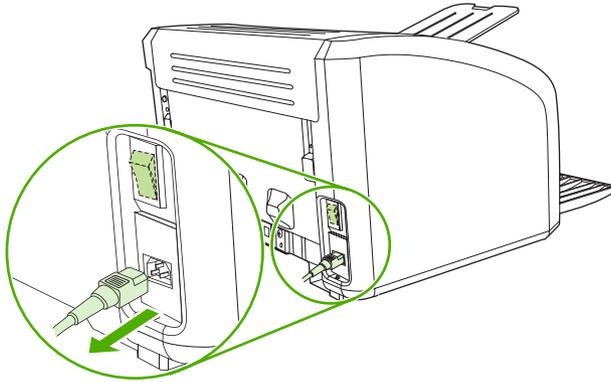


- 2 At the back of the printer, use a #2 Phillips screwdriver to unscrew the two screws that hold the separation pad in place.

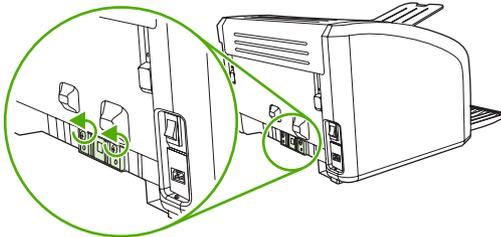

- 3 Remove the separation pad.

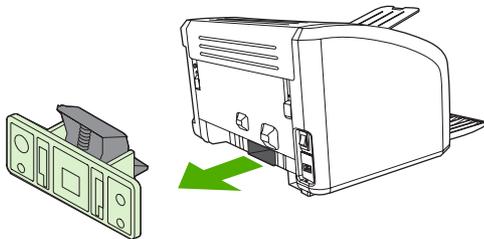

- 4 Insert the new separation pad, and screw it in place.

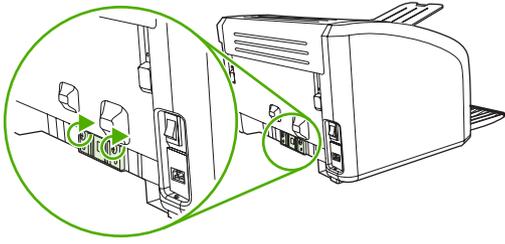

- 5 Plug the printer in, and then turn it on.

