

## Removal and replacement: Document feeder rollers

- [Introduction](#)
- [Step 1: Remove the document feeder rollers](#)
- [Step 2: Unpack the replacement assembly](#)
- [Step 3: Install the document feeder rollers](#)

### Introduction

This document provides the procedures to remove and replace the document feeder rollers

[Click here to view a video of this procedure.](#)



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Disconnect the power cable.

**⚠ WARNING!** To avoid damage to the printer, turn the printer off, wait 30 seconds, and then remove the power cable before attempting to service the printer.

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Document feeder rollers part number	
5851-7202	Document feeder rollers

### Required tools

- No special tools are needed to remove or install this assembly.

### After performing service

#### Turn the printer power on

- Connect the power cable.
- Use the power switch to turn the power on.

### Post service test

No post service test is available for this assembly.

### Step 1: Remove the document feeder rollers


1. Open the document feeder cover.

Figure 1-113 Open the document feeder cover




2. Open the document feeder separation roller cover..

Figure 1-114 Open the separation roller cover

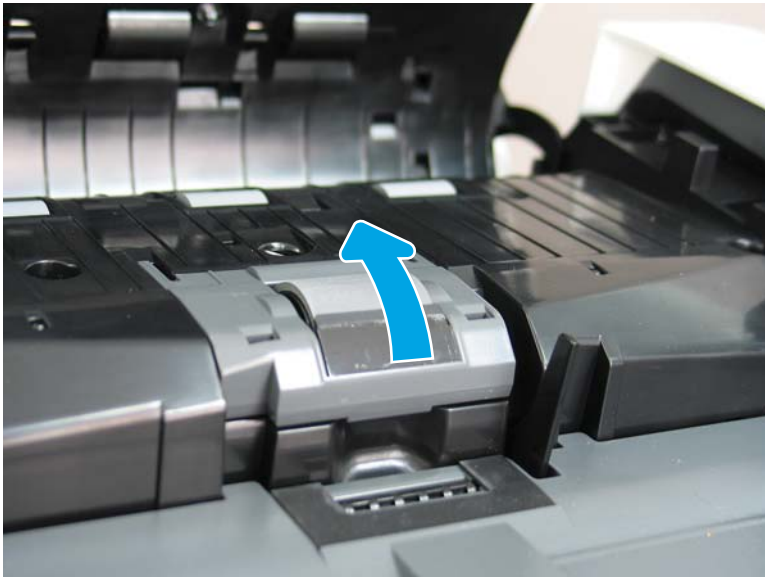

3. Release the hinge pin (callout 1), and then rotate the cover to the right (callout 2) to remove it.

Figure 1-115 Remove the separation roller

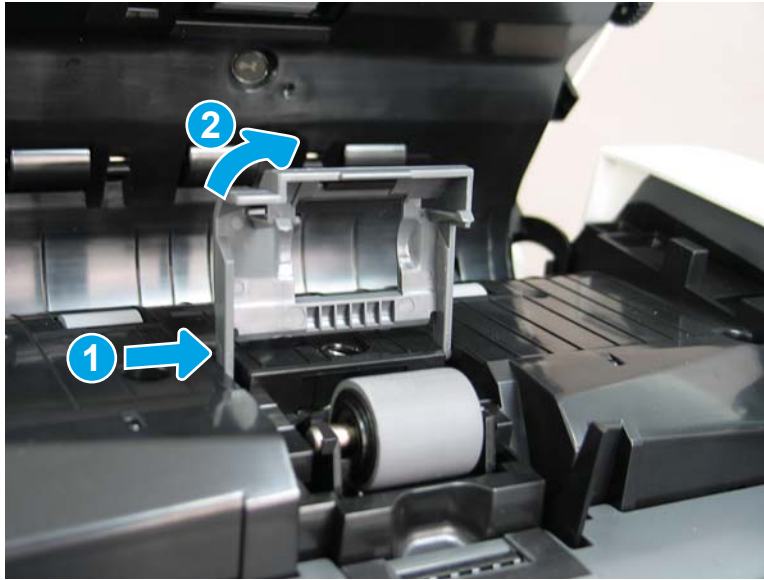



### Step 2: Unpack the replacement assembly

1. Dispose of the defective part.

 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>


2. Unpack the replacement part from the packaging.

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Step 3: Install the document feeder rollers


1. Open the document feeder cover.

Figure 1-116 Open the document feeder cover




2. Rotate the blue locking lever down.

Figure 1-117 Rotate the blue locking lever down

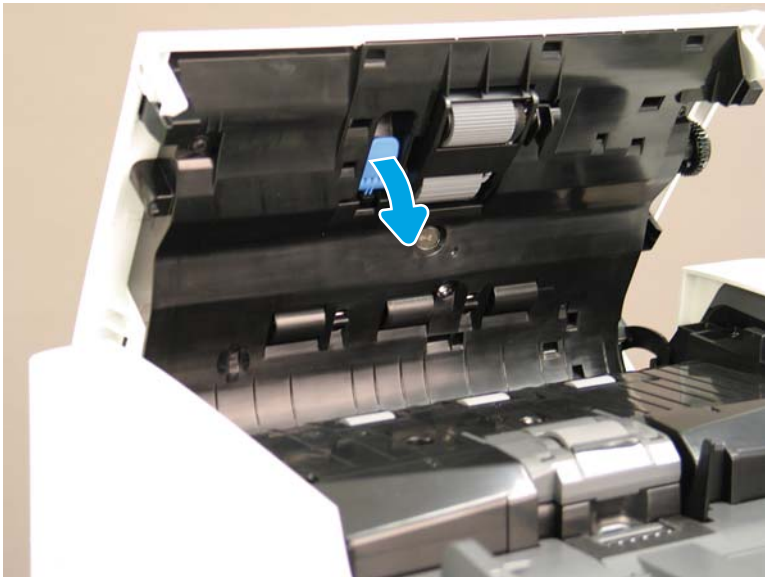


3. Slide the locking lever toward the front of the printer.

Figure 1-118 Slide the locking lever toward the front

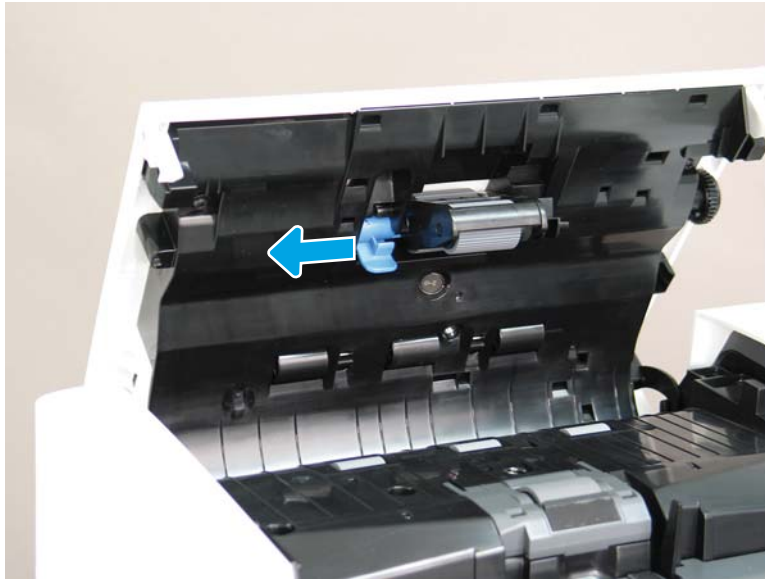


4. Slide the roller to the left (callout 1), and then rotate it away from the document feeder to remove it (callout 2).

Figure 1-119 Remove the pick roller

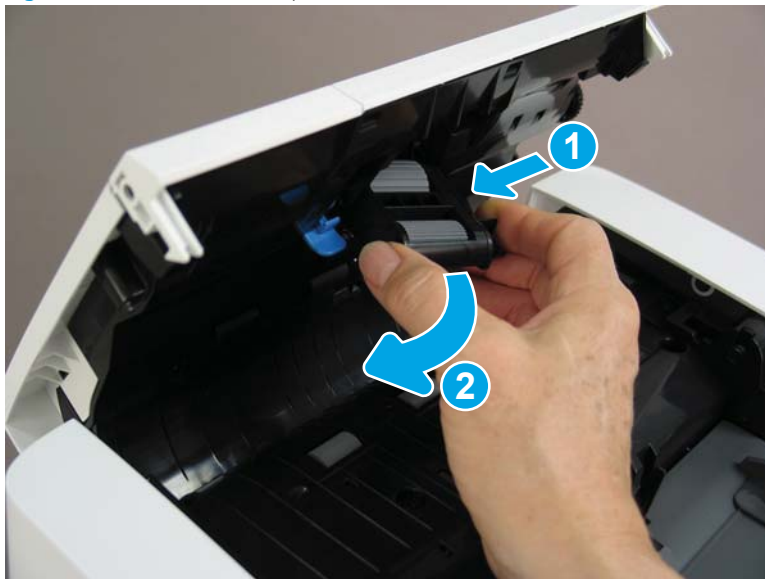


5. Open the document feeder separation roller cover..

Figure 1-120 Open the separation roller cover

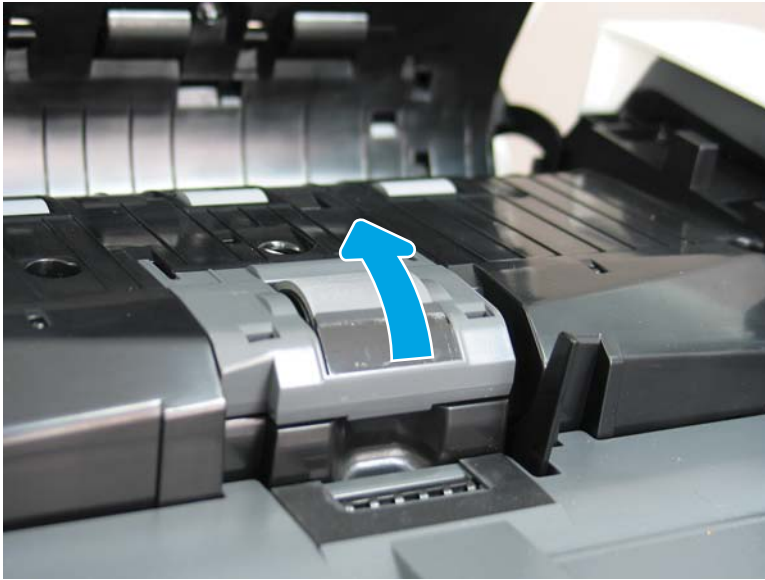

6. Raise the right edge of the separation roller (callout 1), and then slide the roller to the right (callout 2) to remove it.

Figure 1-121 Remove the separation roller cover

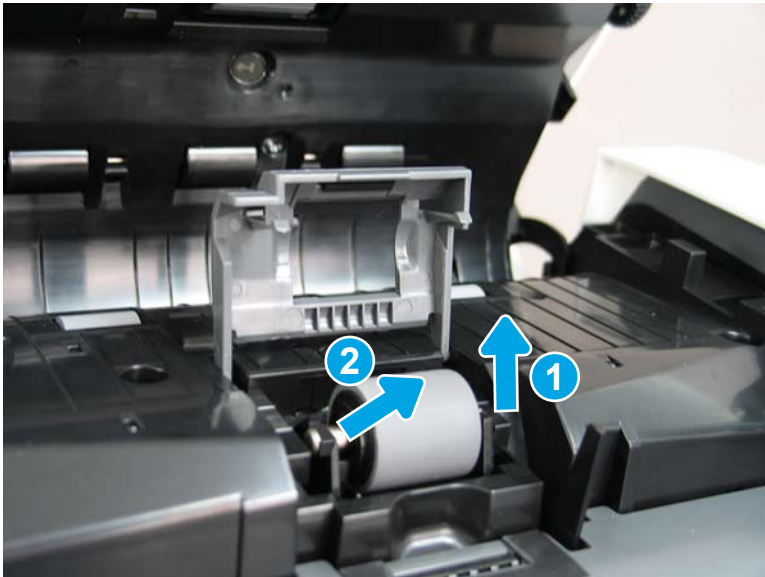

## Removal and replacement: Document feeder separation roller cover

- [Introduction](#)
- [Step 1: Remove the document feeder separation roller cover](#)
- [Step 2: Unpack the replacement assembly](#)
- [Step 3: Install the document feeder separation roller cover](#)

### Introduction

This document provides the procedures to remove and replace the document feeder separation roller cover.



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Disconnect the power cable.



**WARNING!** To avoid damage to the printer, turn the printer off, wait 30 seconds, and then remove the power cable before attempting to service the printer.

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Document feeder separation roller cover part number	
J1H98-60026	ADF Separation Roller Cover

### Required tools

- No special tools are needed to remove or install this assembly.

### After performing service

#### Turn the printer power on

- Connect the power cable.
- Use the power switch to turn the power on.


### Post service test

No post service test is available for this assembly.

### Step 1: Remove the document feeder separation roller cover


1. Install the left end of the replacement separation roller into the holder (callout 1), and then press the right side of the roller down (callout 2).

Figure 1-122 Install the separation roller

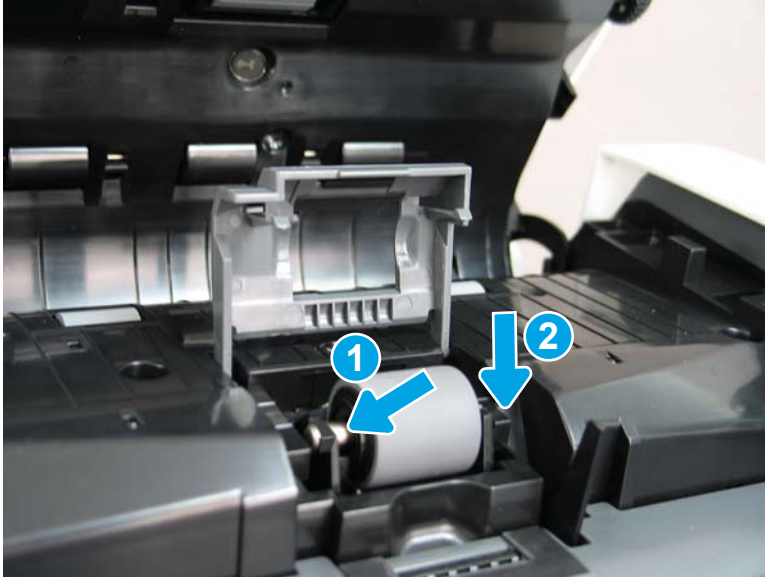

2. Close the roller cover.


Figure 1-123 Close the roller cover

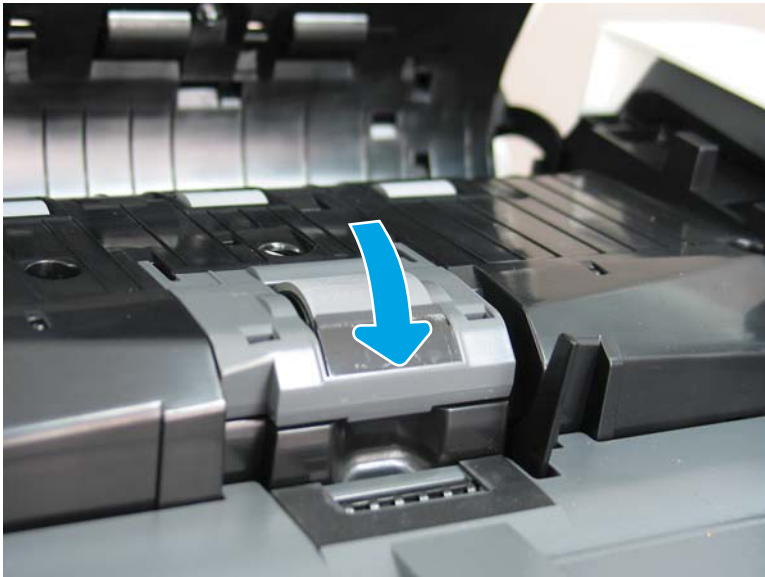




3. Install the tab on the left end of the replacement pick roller assembly into the slot in the document feeder.

Figure 1-124 Install the pick roller

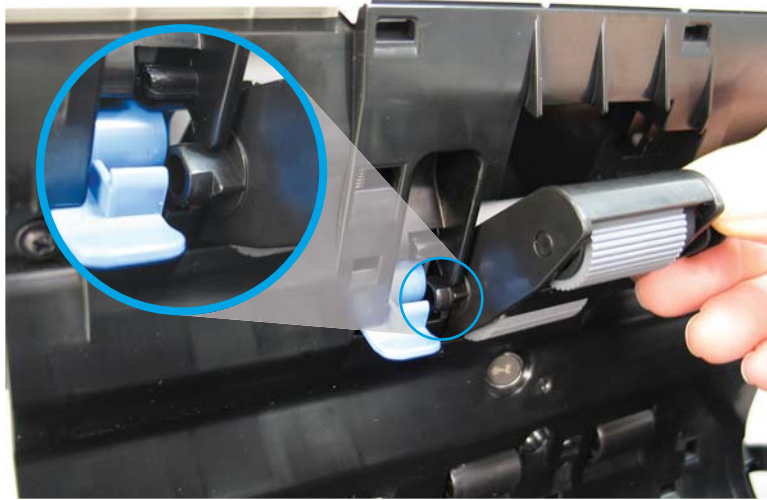


4. Slide the locking lever toward the back of the printer to secure the pick roller.

Figure 1-125 Slide the locking lever toward the back

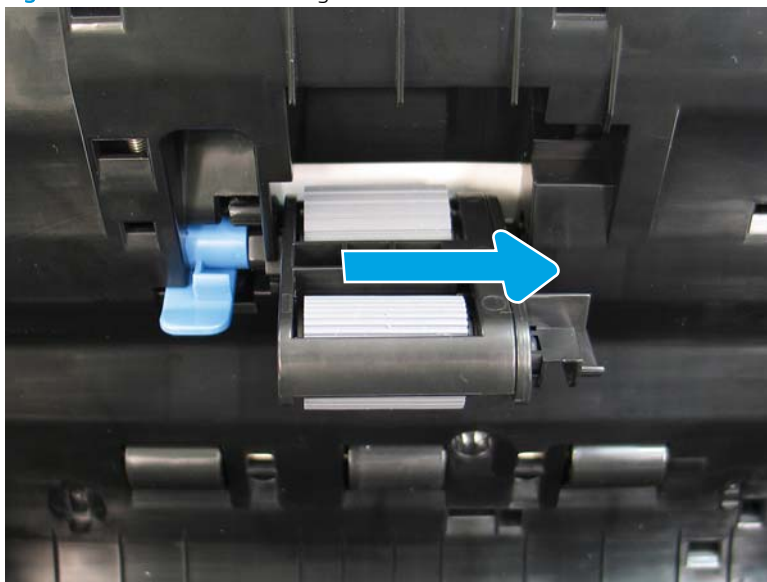


5. Rotate the pick roller assembly up into the holder (callout 1), and then slide the blue locking lever toward the back of the printer (callout 2).

**Figure 1-126** Rotate the pick roller up and slide the blue locking lever towards the back

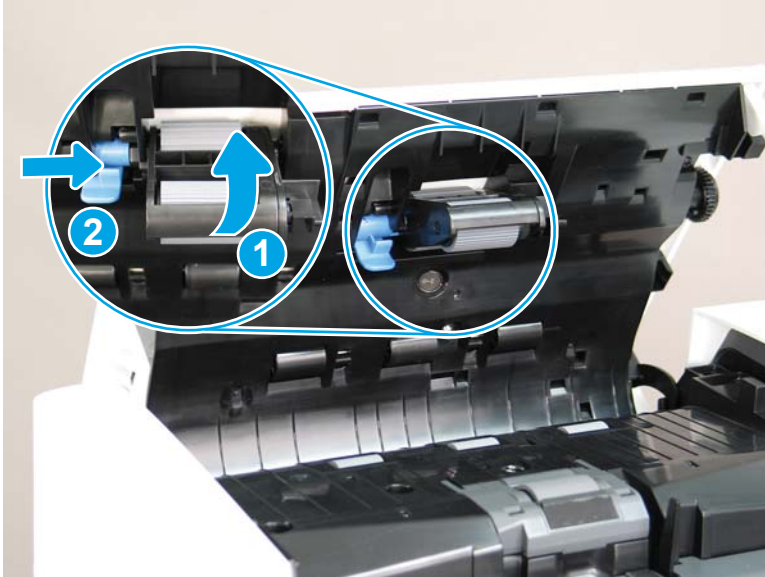

6. Rotate the blue locking lever up.

**Figure 1-127** Rotate the blue locking lever up

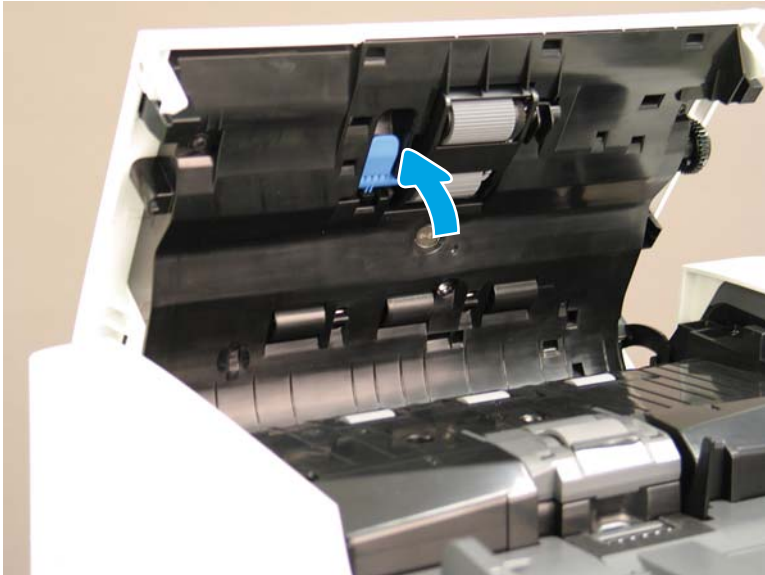

7. Close the document feeder cover.

Figure 1-128 Close the document feeder cover





### Step 2: Unpack the replacement assembly

1. Dispose of the defective part.


 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>


2. Unpack the replacement part from the packaging.

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.


3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Step 3: Install the document feeder separation roller cover


1. Position the right side of the cover in the opening in the document feeder (callout 1), and then lower the left side of the cover (callout 2) to install the hinge pin.

Figure 1-129 Install the separation roller cover

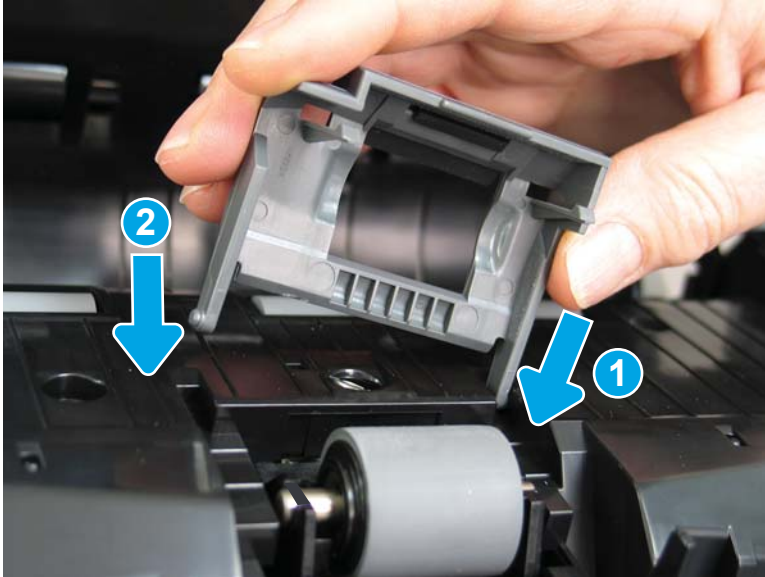

2. Close the roller cover.

Figure 1-130 Close the roller cover

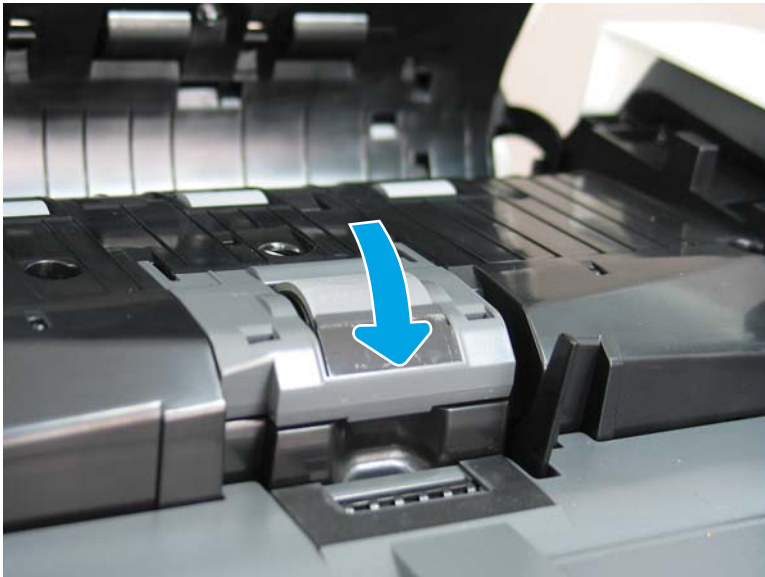

3. Close the document feeder cover.

Figure 1-131 Close the document feeder cover

