

1-5-3 Paper feed section

(1) Detaching and refitting the primary paper feed unit

Procedure

1. Remove the cassette.

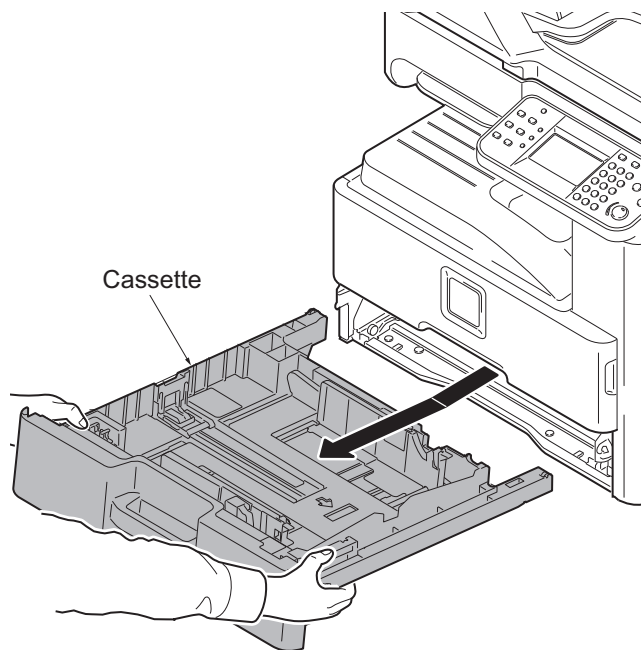


Figure 1-5-15

2. Release the feed lever (yellow) and then remove the primary feed unit.
3. Check or replace the primary paper feed unit and refit all the removed parts.

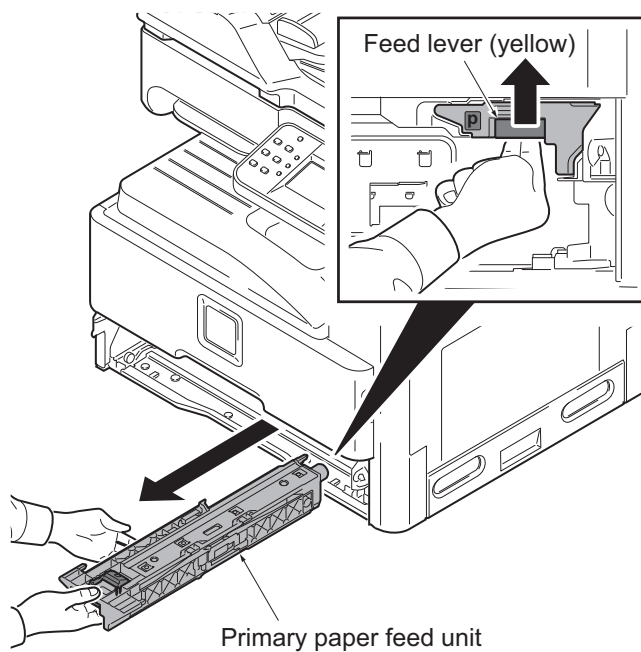


Figure 1-5-16